

# 42-48 Ford Car Installation Instructions



#1



#2

**Remove all parts from you dash, except Speedo trim ring.**

Install ( 10 ) 8/32 x 5/8 studs in dash adapter as shown in Photo #1.


Install ( 2 ) Gauges in dash adapter as shown in Photo #2.

**Leave Clear Protective Covering On Your Panel Until It Is Completely Installed, To Protect The Highly Polished Surface.**



#3

Install dash adapter as shown in Photo #3  
From rear of dash.  
Using ( 2 ) 10/32 x 3/8 Pan Head Screws & Washers.

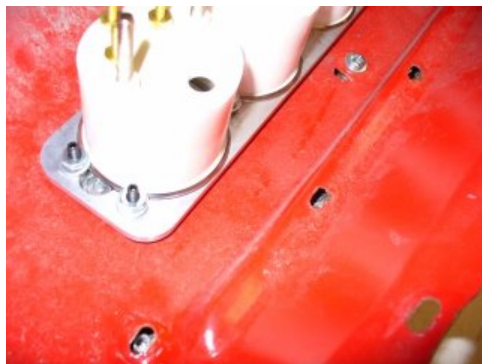

#4

**Do Not Over Tighten Gauges to Panel.**

**Overtightening may break the glass.**

Install the 2 outside gauges as shown in photo #4 & #5.



#5



This is what it will look like before gauge trim ring is installed.

If your dash still has the studs on the rear of the gauge trim ring they will have to be removed.

Use doubled sided tape, or silicone to re-install trim ring.



Install ( 4 ) 8/32 x 5/8 studs in adapter.

Use brackets supplied to install Speedo or Tach adapter in dash from the rear.

The 2 holes closest to outside edge of adapter is for the brackets.

In some cases these brackets will have to be bent slightly.

Now install Speedo or Tach as shown.



### ***Completed installation***

Please note that gauges will not be perfectly aligned behind the trim ring. The new gauges are larger than the old ones, we put them as close to the original hole as possible.

**Congratulations! You are done!**