



## Sender Installation 55-57 Chevy Car Stock 8" Tank

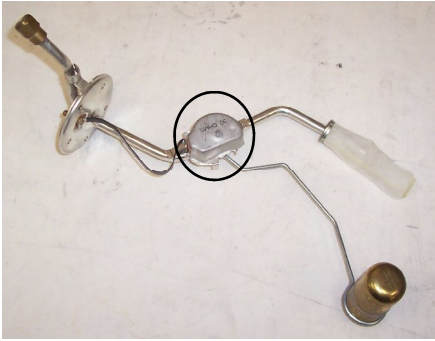


1. Remove Circled Part. Sand Off Spot Welds You Wont Need Any of These Parts. Sand Area To Prep For Spot Welding.

Should Look Like Picture Below With Parts Removed.

2. Area Circled Is Center of New Float Control. It Is 5/8" From Center of 1st Bend.

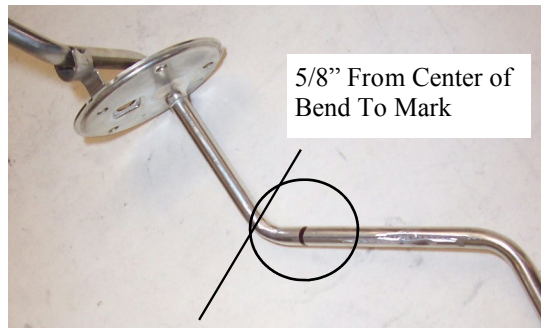

3. Remove White Porcelain Float Control From New Sender. Cut Off The End With The Threaded Holes, Flush With The Porcelain. Spot Weld To Tube As In Photo. Center of Unit Should Be 5/8" From Center of 1st Bend.

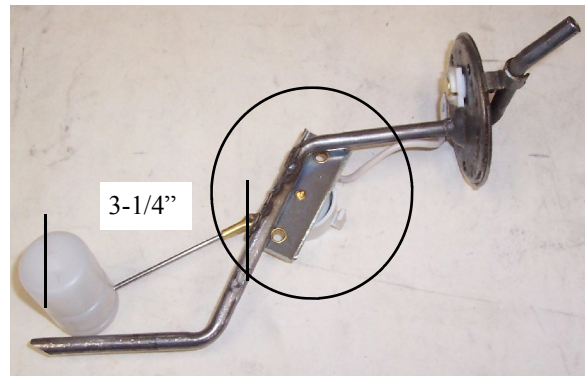

4. Float Arm Should Be Cut To: 3-1/4" Center of Float to Bend in Arm

5. Use Wire and Insulators From New Float Control. Keep Stud Isolated From The Top of Unit, This is a Hot Wire.



0-30 sender install.pub

Instruction Sheet  
Reference # 5