


57 Ford Car Dash Insert Install Instructions #110557



Supplied clips will have to be bent slightly to achieve the desired tightness. Some clamp edges will have to be filed for clearance.

Remove everything from panel as shown
Cut dash to allow enough room for your gauges. Red lines are approximately what you will need.

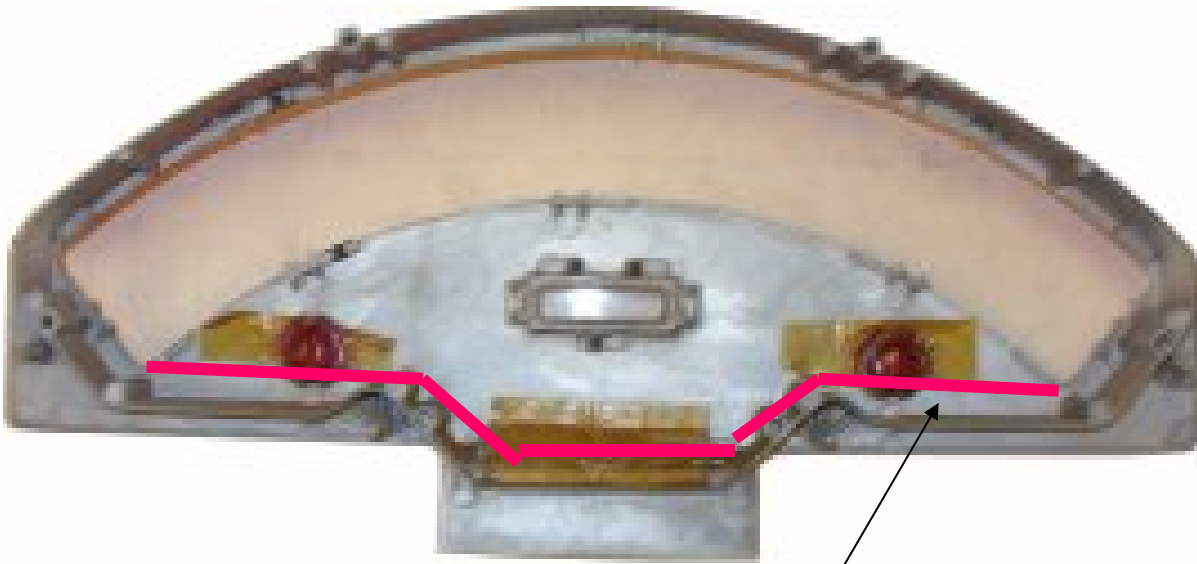

Billet Insert will be installed from front as shown.



Instr sheet #8