

69 Camaro LED Tail Light Installation Sheet

Install Carriage Bolts in Tailpan using 1/4-20 Nuts

Use the large washers for spacing the carriage bolt square head. Place bolt in, use 2 washers and then nut.



As Shown in Photo 1

Use Special Curved Brackets to Mount Lights To Tailpan.

Donot Over Tighten!

Photo 2

We have found that some tailpans stamped holes for mounting bolts are a bit small.

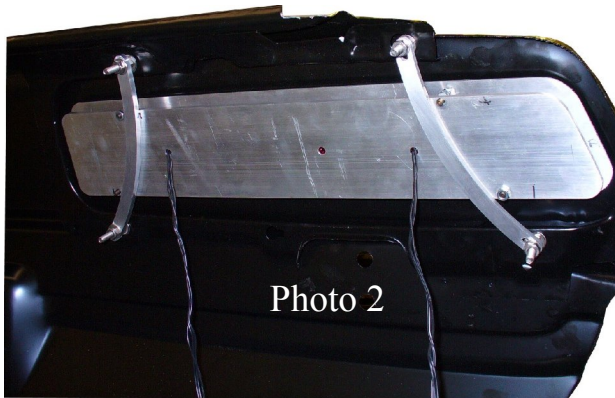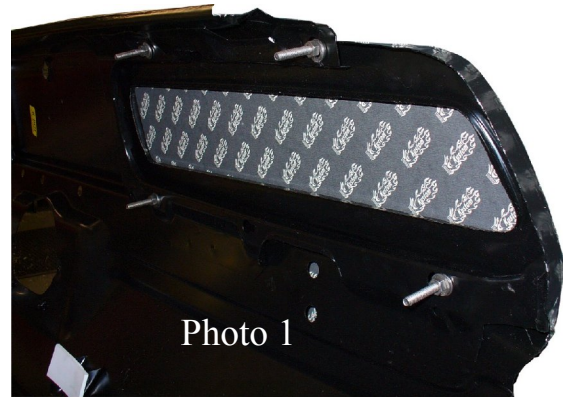

LED Wiring Instructions

White Stripe Is Ground

Tail Light Is Marked. Tail.

Other Black Wire Is Stop & Turn

If you donot have an incandescent bulb in the system you made need an electronic flasher to make the turn signals work.

Hardware Package For Both Lights

- (4) Curved brackets
 - (8) 1/4-20 X 1-1/2 Carriage Bolt
 - (16) 1/4—20 Nut
 - (16) 3/8 AN Washer
 - (8) 1/4 Flat Washer
- Install Instruction Sheet



Hi-Quality Billet Aluminum