
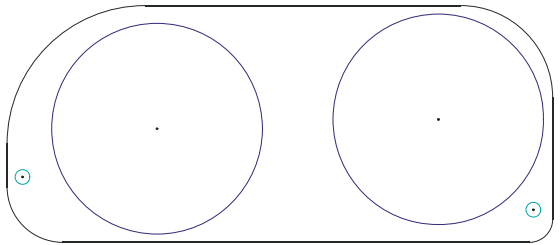


73-80 Chevy Truck Panel Instructions # 220673


1. Remove instrument bezel. Leave instrument plastic housing in place.
2. Remove all the old instruments.

If you are not re-wiring your truck save old wiring.

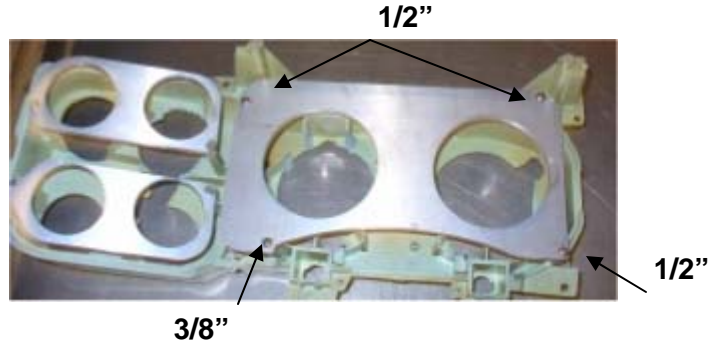

3. Install Speedo & Tach Billet Plates as shown in left drawing.
4. 1/2" spacers between panel & plastic
5. 3/8" spacer between panel & plastic
6. Using 3-3/8" hole saw cut out relief for new gauges.

Gauge holes and mount holes are left large for you to position them in the center of your bezel.

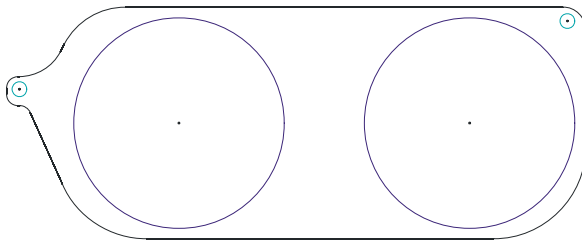

7. Install small gage plates as shown
8. Using 2-1/4" hole saw cut out relief for new gauges.

Gauge holes and mount holes are left large for you to position them in the center of your bezel.

Your panel should look like this before installing bezel.



9. Re-install your bezel and position as needed.
10. Re-wire as needed.

