

Arm Rest Instruction Sheet

Locate Arm Rest In A Comfortable Position.

1. Allow room for fasteners in rear of door.
2. Watch for interference of glass.
3. Level to suit.

Install studs thru door. You can use arm rest for drill template.

Use jam nuts to sandwich studs onto door.


After upholstery is complete, just slip arm rest over studs, and install jam nuts under arm rest.



Locate adjustable door pull stud.
Drill hole and mount stud to door.
Slip round spacer over stud and tighten set screw on door stud and on arm rest.

Backing Plate Install

Use backing plate for drill template and install same as above.

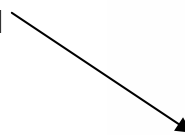

LED Directional Courtesy Lights Option

Wire with White Stripe as + **Positive**.



Hi-Quality Billet Aluminum Products
Aluminum Janks